


ABOUT OUR PRODUCT

The ball joint boot kit was designed to reduce heat to the ball joint, and keep the boot from melting.



Each piece is made from Koolmat material, and will not separate, tear, or easily puncture. The pieces are die-cut so that they are precise.

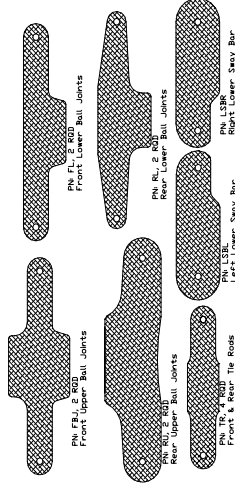

Koolmat is a composite insulation, made from fiberglass and silicone fused together without adhesives.

The material is durable and watertight, and can withstand temperatures of up to 1100° on the fiberglass side and temperatures up to 500° , with continuous use, on the silicone side. Koolmat will also remain flexible in temperatures as low as -40° below Zero.

WHAT THE KIT INCLUDES:

Each kit includes 4 tie rod boot shields, both front and rear, 2 rear lower ball joint boot shields, 2 rear upper ball joint boot shields, 1 left lower sway bar boot shield, 1 right lower sway bar boot shield, 2 front upper ball joint boot shields, 2 front lower ball joint boot shields, 8 black UV 7" tie straps, and 6 black UV 14" tie straps and 1 Instruction sheet. Metal straps are available upon request if the heat is too high for plastic tie straps.

INSTALLATION IS EASY!



Install the shields with the woven side out. Insert the tie strap through the grommets and pull till snug. The picture above shows the front upper shield.




Installed version shown above.

**OTHER PRODUCTS OFFERED BY
KOOLMAT:**

Koolsox ® - 1200° protection for spark plug boots. #07500 & more



Shifter Insulation - Seals out the heat from the motor. #07029

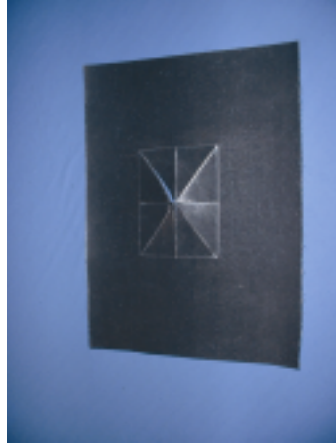

Koolmat® - starter cover with strap
Koolsleeve® - protection for wires and fuel lines.

Products can be ordered from our distributors, or directly from Koolmat, Inc.

Visit our website at www.koolmat.com or call us at 704-662-9099 or 877-566-5369

OUR DISTRIBUTORS:

PYFC (Parts For Your Car)

3020 Issaquah-Pine Lake Rd #35
Sammamish WA 98075
www.pfyc.com

Archer Accessories

4415 Venture Ave
Duluth MN 55811
www.archerracing.com

**“KOOLBOOTS”
BOOT SHIELD INSULATION
FOR
ROAD RACING!**

For: Corvette, Vipers, Mustangs



Part No. # 07064 32-piece kit

**How to STOP BURNING
BOOTS!**

Product by Koolmat Insulation
P.O. Box 985
Moorestville, NC 28115
704-662-9099

WWW.KOOLMAT.COM